GRAND PISTON - PENDANT LIGHT

SOLID CRAFTED GLASS CYLINDER WITH COOLING SOCKET AND HIGH-POWER LED AS A PENDANT LIGHT

A lighting fixture with a strong personality thanks to its perfect design and high-tech cooler.

Since the cylinders are handmade and each piece is unique, the length of the drops and other features vary. Median length incl. socket: approx. 500 mm (with a max. tolerance of +/- 20 %). Outer diameter of the glass: approx. 50 mm; outer diameter of the socket: approx. 60 mm. The glass length can be customised.

Technical specifications

Voltage	24 V DC (CV)	Colour temperature	2,000–3,000 K	
Power	approx. 15 Watts	Weight	approx. 5–6 kg	
Luminous flux / efficiency	430 lm / 29 lm/W	Dimensions (L x W x H)	approx. 60 x 60 x 500 mm	

LED modules with various colour temperatures:

"Warm white (COB) LED": 2,500 K, > 90 Ra; "Amber (COB) LED": 2,000 K, > 80 Ra; "Tuneable white LED": 2,000–3,000 K (adjustable colour temperature), > 80–>90 Ra. Lifespan of the LED module: approx. 40,000 hours; can be replaced by electrician.

Control technology


The light fixture is dimmable with interface for phase cut (trailing edge) dimming, 1–10 V, pushdim, remote control, DALI, or CASAMBI. Dimmer / power supply units have to be installed externally; switches / controllers to be provided by the customer.

Ceiling bracket / cable

DB 060 surface-mounted. DB 075 and DB 032 flush-mounted. The cable consists of wire-coated, tin-plated steel mesh (outer diameter: 6.3 mm). Standard cable length 2 m, individual cable length up to 20 m.

Material

Please select your preferred surface finish for the socket and ceiling bracket in the "Material" section of our website.

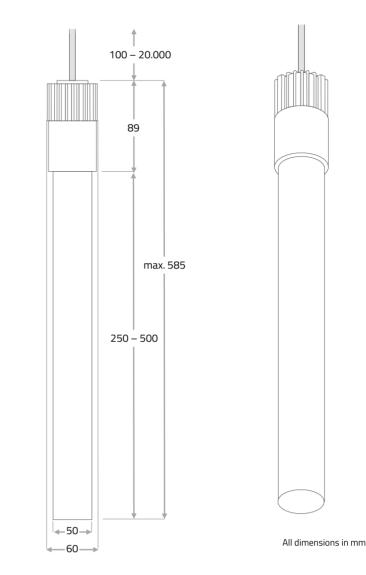




Massifcentral Manufactur GmbH, Eiswerderstr. 16, D-13585 Berlin

MASSIFCENTRAL Phone +49 (0)30 33 30 80 30 00, info@massifcentral.de, www.massifcentral.de

© 2022, Massifcentral Manufactur GmbH. All rights reserved. The drawings and information contained herein may not be reproduced, communicated to the public or made available in whole or in part without prior permission. Patents issued and pending. All technical information in this document is subject to change.

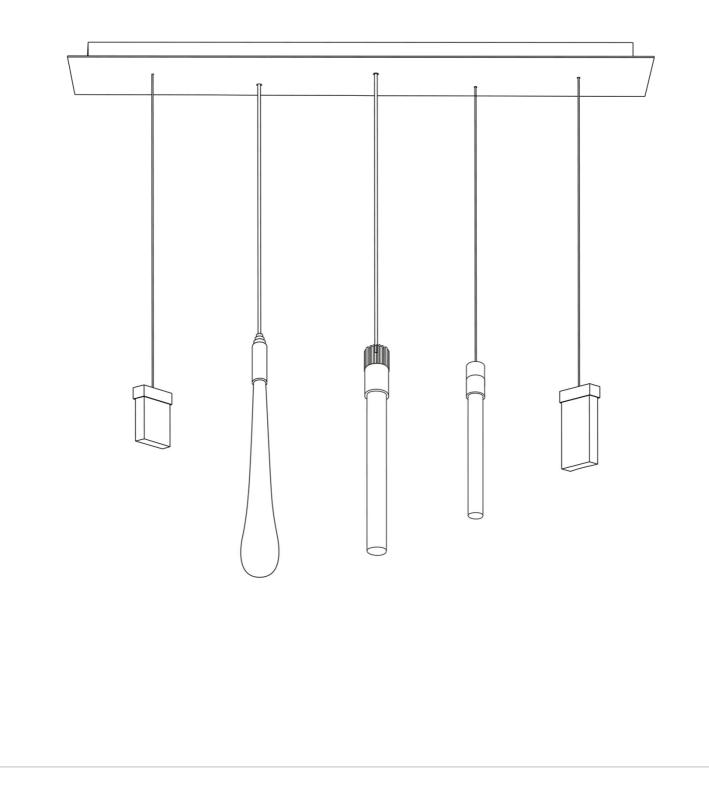

Installation and care instructions

CEILING BRACKET CANOPY (DB BAL)



MASSIFCENTRAL

Content

Important information	2
Mounting	3
Electrical connections	4
Operation and care	4
Technical specifications	4

This instruction is valid for canopies for: GRAND CRU, PETIT CRU, FLEUVE, GRAND PISTON und PETIT PISTON

Important information please read carefully prior to assembly!

Each light is subject to quality control and testing before it is dispatched. Please unwrap the components carefully! The polished or nickel-plated metal surfaces of the product are sensitive. Do wear gloves and mount the parts on soft pads like blankets etc. The glass is sensitive to hits and may be damaged or scratched when handling is not gentle. Leave the bubble foil on the glasses as long as possible to prevent damages during the mounting procedure.



This is a low-voltage LED light! Always use the included power supply and never connect the light cable directly to the 220 V mains network. This would destroy the light completely.

Important! Electrical devices may only be installed and assembled by qualified electricians. Applicable health and safety regulations must be observed. Shut off the mains supply (switch off the automatic circuit breaker) before commencing work on the device in order to prevent electric shocks. Failure to adhere to the installation instructions may cause fires or other hazards.

Important! Do not twist the wire-insulated light cable!

Mounting

- 1. Unlock the canopy plate which in delivery status is screwed to the canopy box by removing the lateral screws in the shadow gap area of the box (black side). Keep the screws in a safe place, you will need them for final installation! If canopy box is screwed to wooden crate remove screws as well.
- 2. Mounting of the canopy box: pass through the electrical cable from the ceiling into the box at appropriate position and fix the canopy box to the ceiling with included screws. Make sure the ceiling structure and pegs will support the heavy weight of the canopy. Please find the total weight of light fitting in packing list.
- 3. Mounting of the canopy plate: the canopy and the box have corresponding assembly jigs. For feasible installation, the box has preinstalled cables to be passed through the mounting angles of the canopy, these are marked with "MH" (for "mounting help"). Fix cables with brass blockers in appropriate height so that the canopy plate will be kept suspended "in the air" right below the canopy box during installation with approx. distance of 30-50 cm to the box/ceiling. Now you can mount the cables of the CRU-lights and connect the cables inside the box.
- 4. Mounting of the CRU-lights: the holes have corresponding numbers on the back of the canopy plate and in the box, make sure both holes match. The cables have to be passed from below through the holes in the canopy plate. Then pass the cable through the hole in canopy box of the corresponding angle. **Attention!** Make sure the cable is passed in the angle from the outside face of the angle, otherwise the canopy can not be mounted (see picture A). **Fix the position of pendant lights with included brass cable blockers using a screwdriver. Attention: tighten the screws gentle (hand-tight) as otherwise cables may be damaged .**
- 5. If ordered by customer, the cables may have a mark at appropriate position to help to find the exact position. In this case, please refer to the numbers on the cables and corresponding holes of the canopy. Make sure the owner is aware of the hanging distribution! Once the lights have been installed you connect all lights to the delivered blocks. Prevent the metallic wire insulation from producing short circuits in the box when connected to the blocks!
- 6. Make sure that the orientation of glasses will face in the right direction according to random or strict hanging. The cables are rigid, so the position of the glass has to be controlled at the hook by turning the cable in the right position and NOT by turning the cable at the socket (which may be damaged!). This step should be done before connecting the cables to the power supply as it will be much easier than after the next step.
- 7. The electronic devices can be mounted inside the canopy box or are delivered as external devices. Attention: Installation only to be executed by professionals as wiring may be a mains cable with 110 /220 Voltage, Danger of Life! Shut down the circuit breakers before handling! Connect the cables to the power supply by using the pre-installed terminal blocks (see Electrical connections next page). After connecting all the cables to the blocks carry out a performance test.
- 8. Finally push up the canopy plate upwards to the canopy box and fix it by using the black screws connecting both parts through the lateral angles/fixtures inside the box. You may need a magnified screwdriver to point the screws to the holes inside the canopy box. When canopy is fixed with magnets push plate upwards until it is fixed to the canopy box.

Picture A	

Electrical connections

This is a low-voltage LED light! Always use the included power supply and never connect the light cable directly to the 220 V mains network. This would destroy the light completely.

Important! Electrical devices may only be installed and assembled by qualified electricians. The applicable health and safety regulations must be observed. Shut off the mains supply (switch off the automatic circuit breaker) before commencing work on the device in order to prevent electric shocks. Failure to adhere to the installation instructions may cause fires or other hazards.

Connect the 220 V cable to the primary side of the power supply. Connect the secondary side of the power supply to the cable using the terminal block supplied and bearing in mind the correct polarity: red = plus = +, black = minus = -.

This light is equipped with the following interfaces dimming mode:

External power supply	Integrated power supply
Dimmer with 1–10 V control voltage	
DALI	
Push dim, connection to a switch via cable	
Phase dimmer	
Wireless solution with remote control	
RF sender	
No dimmer	

See also the enclosed instructions and/or labels on the component housings.

Operation and care

The outside of the socket may reach temperatures of up to approx. 60°C when in operation. Warning: risk of burning.

All metal surfaces of the light are nickel-plated or made of polished aluminum, and are therefore susceptible to scratches and improper treatment. Polished metal surfaces will gradually oxidise/anodise and develop a patina.

For cleaning we recommend the use of a moist cloth and standard glass care products.

Technical specifications

See attached datasheet.



Manufacturer: Massifcentral Manufactur GmbH, Eiswerderstr. 16, D-13585 Berlin p +49 (0)30 33 30 80 30 00, info@massifcentral.de, www.massifcentral.de